


Wöhler GRP Rod Repair Kit

EN

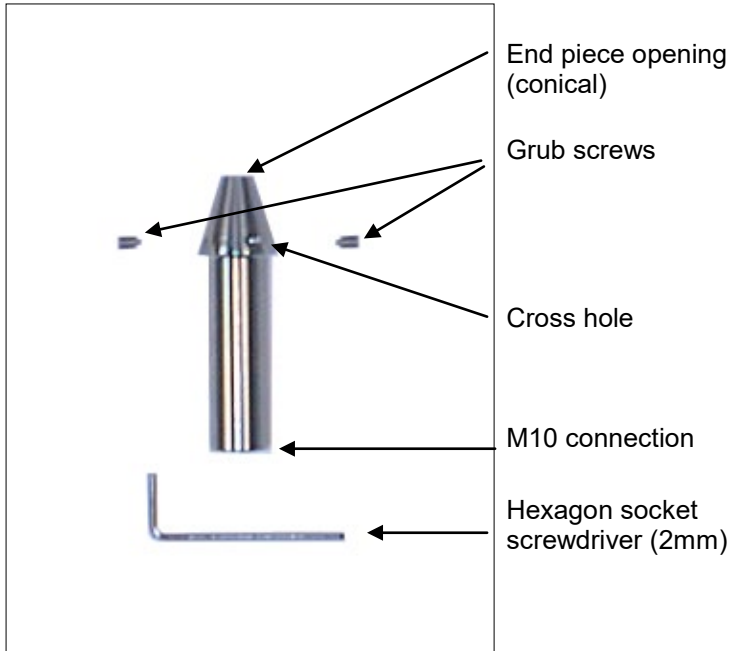

- Saw the damaged GRP rod end straight off.
- Insert the rod end into the conical end piece opening (see illustration).

The diameter of the rod determines the length of the rod to be inserted. The following table shows the exact dimensions.

Ø GRP Rod	Rod length to be pushed in
4,5 mm	19 mm
6 mm	21 mm
7 mm	28 mm
8 mm	28 mm
9 mm	28 mm
11 mm	43 mm

To lock the rod, screw the grub screws into the two cross holes using the hexagon socket screwdriver.

Important: The screws must be screwed flush into the end piece so that they do not protrude from the end piece.

GRP Rod Repair Kits

- GRP Rod Repair Kit 4,5 mm Ø art. no. 3687
- GRP Rod Repair Kit 6 mm Ø art. no. 3686
- GRP Rod Repair Kit 7 mm Ø art. no. 3696
- GRP Rod Repair Kit 8 mm Ø art. no. 3689
- GRP Rod Repair Kit 9 mm Ø art. no. 3690
- GRP Rod Repair Kit 11 mm Ø art. no. 3691